


## ADDENDUM TO SPAD XIII ASSEMBLY STEP 3, ITEMS 2 & 3: ATTACHING THE STEPS TO THE EXHAUST PIPES

1. Make a bend in the ends of two nylon wire-ties and guide each wire tie into the opening in each step assembly as shown in the photo at the right.
2. Use long-nosed pliers to pull each wire tie fully through the opening in each step assembly.
3. Position the step assemblies against the exhaust pipe as shown in the photo below. Guide each wire tie around its exhaust pipe, into and through the wire tie's locking end, then firmly tighten each wire tie against its exhaust pipe to secure the step assemblies to the exhaust pipes. Cut and discard the wire ties' excess length.

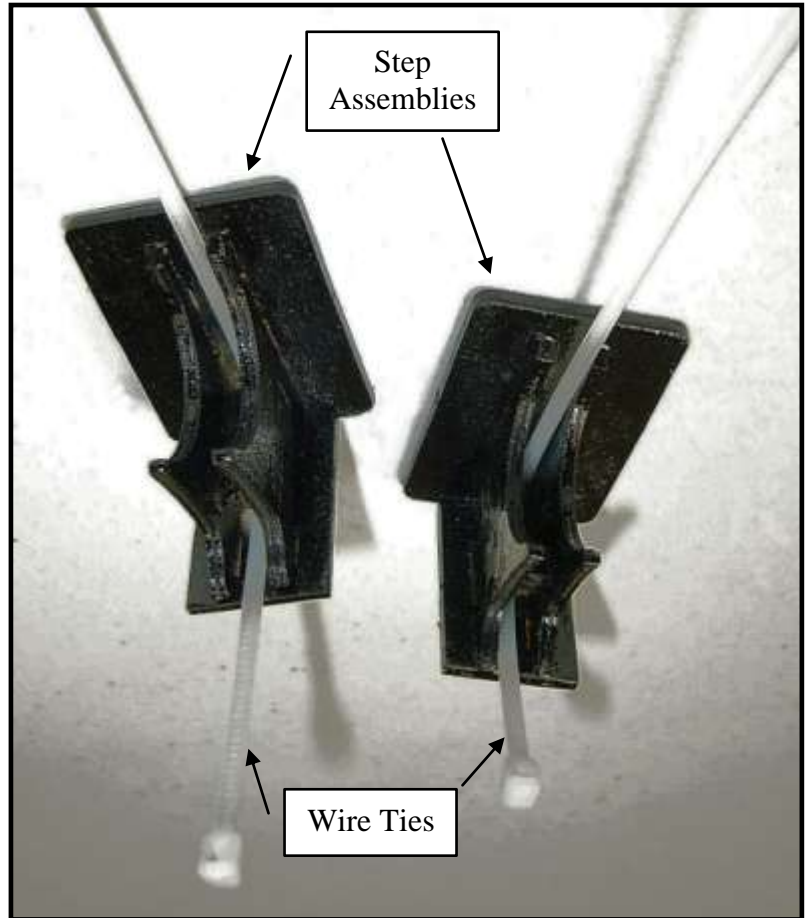

4. To provide greater flexibility in exhaust pipe placement, the indentations in the fuselage mentioned in item 3 and shown in the photo at the bottom of page 8 have been eliminated.

We sincerely apologize if this change has caused you any difficulty and invite you to contact us by e-mail at [services@maxfordusa.com](mailto:services@maxfordusa.com) or by phone at 562-529-3988 if any question or problem remains or arises. Our office hours are 9 AM to 5 PM Pacific time, Monday through Friday, except national holidays.